



Port Configuring for SIP Calls

Applies to DSP-1282 and DSP-1283

Avia™ DSP Help Guide

Crestron Electronics, Inc.

DSP-1282 and DSP-1283 units with AEC have separate network interfaces for VoIP and LAN on the rear panel. Either one can be configured to handle SIP network traffic. The default configuration binds SIP data to the LAN interface, mixing it with Crestron control data. Optionally, you may choose to bind the SIP data to the VoIP network port with the following ToolBox console commands. If the VoIP port is to be used, it must reside on a separate VLAN from the DSP's LAN port. The two ports cannot connect to the same network.

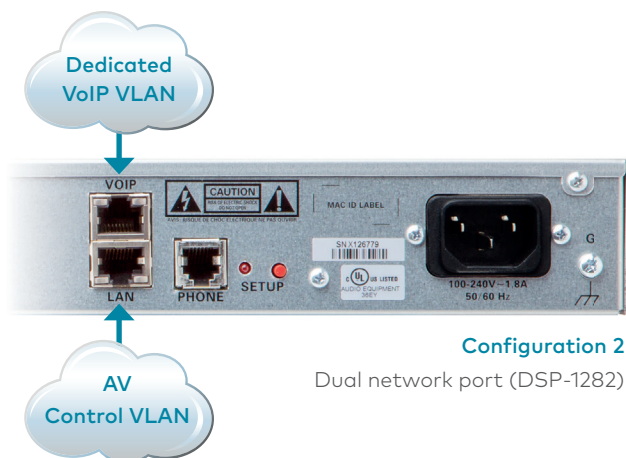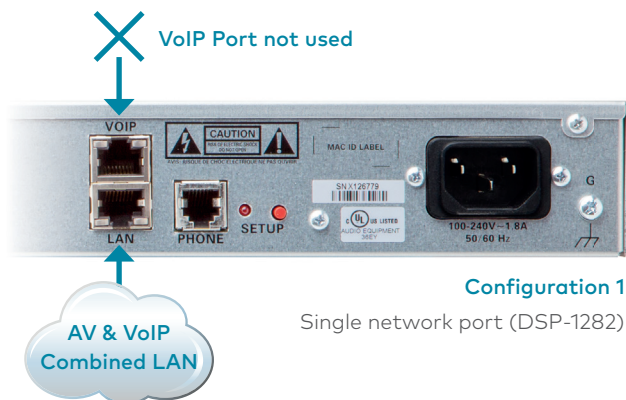

Using the VoIP port and a separate VLAN offers several advantages when deploying in larger enterprise environments. This assists the administrators with debugging, traffic management and QoS reliability. It is also beneficial to have the VLAN deterministic IP addresses to minimize firewall configuration issues.

NOTE: A future Avia Audio Tool software release will allow switching the port configuration from the Preferences tab.

Starting with Avia DSP Firmware version 1.00.116 these console commands are enabled.

Step 1 – Enable VoIP port

DSP-1282 > ethernet ?

ETHERNET [<device_num> ON | OFF [/now]]

device_num - 0..n

ON - enables VoIP

OFF - disables VoIP

/now - take effect without a reboot

No parameter - displays current setting

The **"ethernet"** command is used to turn the VoIP port on/off. The VoIP port is off by default.

<device_num> = 0 is the LAN port

<device_num> = 1 is the VoIP port

Only the VoIP port is selectable on/off

Step 2 – Direct SIP traffic to the VoIP port

DSP-1282>sipinterface ?

Get or Set SIP Interface

SIPINTERFACE [LAN | VOIP]

LAN - normal LAN port

VOIP - VOIP port

No Parameter - Displays current setting

The "sipinterface" command is used to bind all SIP activity, data and traffic to the selected port. If a VLAN or exclusive VoIP network is available, binding to the VoIP port is recommended.

Step 3 – Verify settings

DSP-1282>ethernet

Ethernet 0 (eth0): On

Ethernet 1 (eth1): On

DSP-1282>sipinterface

SIP Interface : VOIP

DSP-1282>ipconfig

Ethernet Adapter [eth0]:

Link Status : OK

DHCP : ON

MAC Address : 00.10.7f.12.34.56

IP Address : 10.66.32.39

Subnet Mask : 255.255.248.0

IPV6 Address :

Default Gateway : 10.66.32.1

DNS Servers : 10.65.5.1 | DHCP |
192.168.200.100 | DHCP |

LAN Port

Ethernet Adapter [eth1]:

Link Status : OK

DHCP : ON

MAC Address : 00.10.7f.12.34.57

IP Address : 172.15.62.70

Subnet Mask : 255.255.252.0

IPV6 Address :

Default Gateway : 172.15.62.1

DNS Servers : 10.65.5.1 | DHCP |
192.168.200.100 | DHCP |

VoIP Port

Crestron product development software is licensed to Crestron dealers and Crestron Service Providers (CSPs) under a limited non-exclusive, non-transferable Software Development Tools License Agreement. Crestron product operating system software is licensed to Crestron dealers, CSPs, and end-users under a separate End-User License Agreement. Both of these Agreements can be found on the Crestron website at www.crestron.com/legal/software_license_agreement.

The product warranty can be found at www.crestron.com/warranty.

The specific patents that cover Crestron products are listed at patents.crestron.com.

Certain Crestron products contain open source software. For specific information, please visit www.crestron.com/opensource.

Crestron, the Crestron logo, and Cresnet are either trademarks or registered trademarks of Crestron Electronics, Inc. in the United States and/or other countries. Other trademarks, registered trademarks, and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. Crestron disclaims any proprietary interest in the marks and names of others. Crestron is not responsible for errors in typography or photography.

This document was written by the Technical Publications department at Crestron. ©2016 Crestron Electronics, Inc.